

3D PE Foam Wall Panels

Installation:

TOOLS



MEASURE THE SIZE



CLEAN THE WALL



CUT THE SIZE




REMOVE GLUE PAPER




PASTE THE PANELS AS STICKERS



Recommendations:

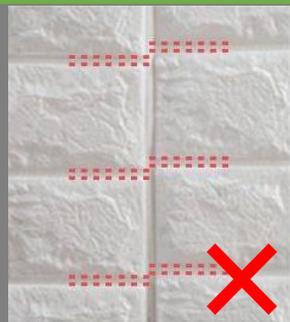

Improperly paste

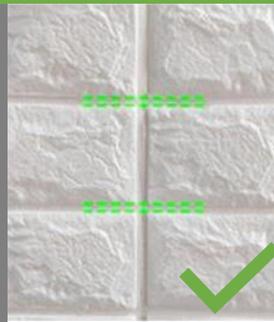

Stick it according to the wall texture



Non tilted sticking



Properly cut and paste

 **Who to apply the Panel brick sheets of two different colors**



1. Cut off the area that will be applied a brick of different color before adhering the panel.



2. Create holes in the same way on the target areas of the brick panels.



3. Cut the brick sheet of the other color to match the Foam brick sheet cut before.



4. Remove the glue paper at the back. Stick the large panel to the wall




5. Apply the cut pieces matching the empty areas on the large panel pasted.



6. Smooth out the surface neatly after application and clean off the surface with dry cloth.

 **Two ways to glue the 3D PE Foam Panels**

1. Without cuts (Direct)

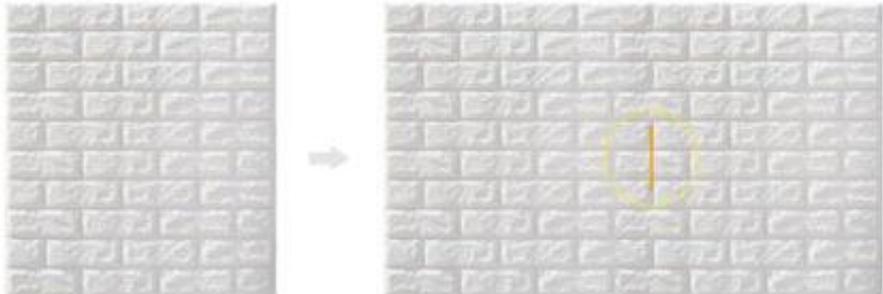

2. With cuts (Artistic)

