

SMART TILES®

Tiling made simple




Cut

PEEL & STICK

Smart Tiles® patented Gel-O™ component will never yellow or crack over time. No grout, no special tools and no mess. Install directly over existing tiles or smooth surfaces*. It does not require any additional glue.

Do it yourself and save money. Do not install on a counter or floor. Do not cover shower walls completely.

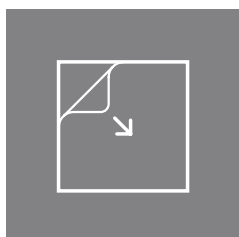

Peel


INSTALLATION

Clean the surface with a degreasing agent. Draw a guideline with a level to help align the tiles. Remove the backing paper without touching the adhesive. Stick the tiles making sure you overlap the grout lines.

IMPORTANT

Do not install on fresh paint. Allow the paint to completely cure for 3 weeks before installing tiles. Install on existing tiles or smooth surfaces only.

Do not install directly on unprimed drywall or sheetrock.

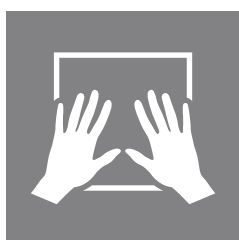


Stick

GAS RANGES

For gas ranges without a back control panel or metal plate, you must maintain a 20 cm safety zone (without Smart Tiles®) on the back wall to prevent direct exposure to open flames. A protective steel panel can be used to safely fill that area.

*Some models hide imperfections better than others.

Made and printed
in Canada

 1-877-784-2733 — quinco@thesmarttiles.com

thesmarttiles.com


WARRANTY

BRİK model installation instructions

You have just purchased the new Smart Tiles BRİK tiles and you can't wait to install them. Take a few minutes to read the installation instructions before starting, as these will make life easier.

Make sure that your wall has a sleek surface. Clean the surface with a degreasing agent such as TSP. It is important to have a smooth surface in order to achieve a perfect grip. You can find more details on our website on the FAQ page.

- 1 Start your installation from the left side of the wall to be sure the grout marked "OVERLAP" is on the right side.
- 2 Using a level, mark the wall with a pencil at the height of the first row of tiles. This will also ensure that the installation is level.

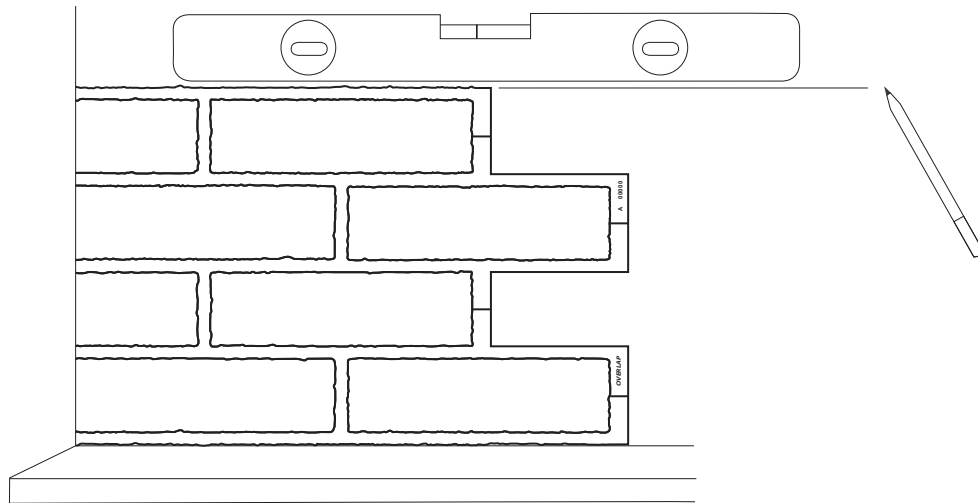

- 3 To align your Brik tiles, small black lines appear in the grout in the center of each tile. When layering, make sure that the small black lines are one over the other and press with your finger to make the tiles stick. Also, the specially formulated Smart Tiles adhesive allows you to reposition the tile during installation if firm pressure has not yet been applied. Easily take them off the wall to reposition them perfectly.



For the FIREPLACE

The BRİKs can be installed on a surface whose temperature does not exceed 49 °C (120 °F). Above all, it is important to avoid any direct contact with a heat source or direct exposure to an open flame.